

# FR – ALLOTECH NOVO 502



Fréquence / Frequency : 433.92 MHz ; Pile / Battery : CR2032

**NOTE :** Avant tout usage de votre télécommande, il est **OBLIGATOIRE** de la programmer. Veuillez suivre la marche à suivre pour profiter de votre télécommande **ALLOTECH NOVO 502**. La programmation de votre télécommande pourrait déclencher l'ouverture de votre portail. Afin d'éviter tout accident, il est conseillé de programmer votre télécommande depuis l'intérieur de votre garage.

## Programmation de votre télécommande sur un récepteur (en cinq étapes)

1) Sur votre récepteur, appuyez sur le bouton de programmation de votre récepteur. Il peut s'appeler suivant les modèles de diverses façons :

- Canal 1 (aussi appelé Channel ou CH)

- Programmation (matérialisé avec l'écriture ENR ; MEMO ; PROG ; REC...)


**⚠ Attention :** Dans le cas où vous appuyez trop longtemps sur le bouton de programmation de votre récepteur, l'intégralité des télécommandes déjà enregistrées peuvent être effacées.

2) La diode du bouton que vous venez de presser doit s'allumer

3) Pendant que la diode du récepteur est allumée, appuyez deux secondes sur le bouton de votre télécommande que vous souhaitez programmer (FIG. A)

4) La diode de votre récepteur doit clignoter puis s'éteindre

5) Félicitations, votre nouvelle télécommande **ALLOTECH NOVO 502** est programmée et prête à être utilisée

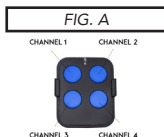

# FR – ALLOTECH NOVO 502



Fréquence / Frequency : 433.92 MHz ; Pile / Battery : CR2032

**NOTE :** Avant tout usage de votre télécommande, il est **OBLIGATOIRE** de la programmer. Veuillez suivre la marche à suivre pour profiter de votre télécommande **ALLOTECH NOVO 502**. La programmation de votre télécommande pourrait déclencher l'ouverture de votre portail. Afin d'éviter tout accident, il est conseillé de programmer votre télécommande depuis l'intérieur de votre garage.

## Programmation de votre télécommande sur un récepteur (en cinq étapes)

1) Sur votre récepteur, appuyez sur le bouton de programmation de votre récepteur. Il peut s'appeler suivant les modèles de diverses façons :

- Canal 1 (aussi appelé Channel ou CH)

- Programmation (matérialisé avec l'écriture ENR ; MEMO ; PROG ; REC...)


**⚠ Attention :** Dans le cas où vous appuyez trop longtemps sur le bouton de programmation de votre récepteur, l'intégralité des télécommandes déjà enregistrées peuvent être effacées.

2) La diode du bouton que vous venez de presser doit s'allumer

3) Pendant que la diode du récepteur est allumée, appuyez deux secondes sur le bouton de votre télécommande que vous souhaitez programmer (FIG. A)

4) La diode de votre récepteur doit clignoter puis s'éteindre

5) Félicitations, votre nouvelle télécommande **ALLOTECH NOVO 502** est programmée et prête à être utilisée

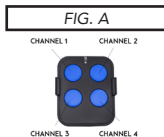

# ENG – ALLOTECH NOVO 502



**NOTE:** Before using your remote control, you **MUST** program it. Please follow the steps below to enjoy your **ALLOTECH NOVO 502** remote control. The programming of your remote control could trigger the opening of your gate. In order to avoid any accidents, it is advisable to program your remote control from inside your garage.

## Programming your remote control on a receiver (in five steps)

1) On your receiver, press the programming button on your receiver. Depending on the model, it can be called in different ways :

- Channel 1 (also called Channel or CH)

- Programming (indicated by ENR; MEMO; PROG; REC...)

**⚠ Warning:** If you press the programming button on your receiver for too long, all the remote controls already stored may be deleted.

2) The LED on the button you have just pressed must light up

3) While the LED on the receiver is lit, press the button on your remote control that you want to program for two seconds on your remote control that you want to program (FIG. A)

4) The LED on your receiver should flash and then stop

5) Congratulations, your **ALLOTECH NOVO 502** remote control is now programmed and ready to be used



DISTRIBUTEUR / DISTRIBUTOR

ALLOTECH

1 RUE DU GABIAN, LE THALES - BLOC B (8ÈME ÉTAGE)  
98000 MONACO (MC)



# ENG – ALLOTECH NOVO 502



**NOTE:** Before using your remote control, you **MUST** program it. Please follow the steps below to enjoy your **ALLOTECH NOVO 502** remote control. The programming of your remote control could trigger the opening of your gate. In order to avoid any accidents, it is advisable to program your remote control from inside your garage.

## Programming your remote control on a receiver (in five steps)

1) On your receiver, press the programming button on your receiver. Depending on the model, it can be called in different ways :

- Channel 1 (also called Channel or CH)

- Programming (indicated by ENR; MEMO; PROG; REC...)

**⚠ Warning:** If you press the programming button on your receiver for too long, all the remote controls already stored may be deleted.

2) The LED on the button you have just pressed must light up

3) While the LED on the receiver is lit, press the button on your remote control that you want to program for two seconds on your remote control that you want to program (FIG. A)

4) The LED on your receiver should flash and then stop

5) Congratulations, your **ALLOTECH NOVO 502** remote control is now programmed and ready to be used



DISTRIBUTEUR / DISTRIBUTOR

ALLOTECH

1 RUE DU GABIAN, LE THALES - BLOC B (8ÈME ÉTAGE)  
98000 MONACO (MC)

